ISA33B Wireless Speaker System

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
  La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
  Attention marquage est situé sur le paneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus.
  Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

WARNINGS AND PRECAUTIONS

- **CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS****: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterías viejas y nuevas.

No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

ATTENTION
RISQUE DE ELECTROCUTION
NE PAS OUVRIR

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Introduction and Setup

Power

Plug the included AC/DC power adapter into the **DC POWER INPUT** to power the base station.

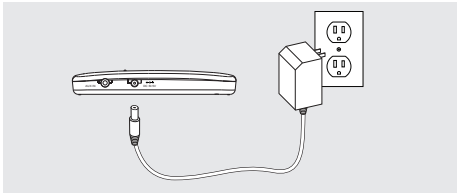

Speakers - Battery Power

Requires 6, D size, batteries (not included).

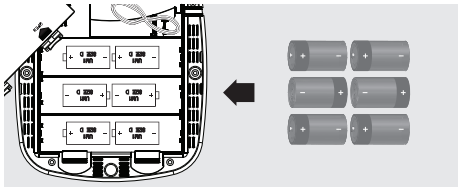

Speakers - Power

Power the wireless speakers by connecting them to a standard AC outlet using the attached AC power cable.

The AC power cable is stored inside of the wireless speaker's battery compartment.

After extending the AC power cable out from the battery compartment, snap the battery compartment door back into position to keep the internal elements of the wireless speaker from being exposed.

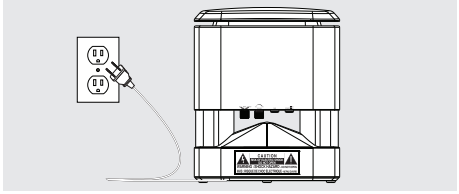

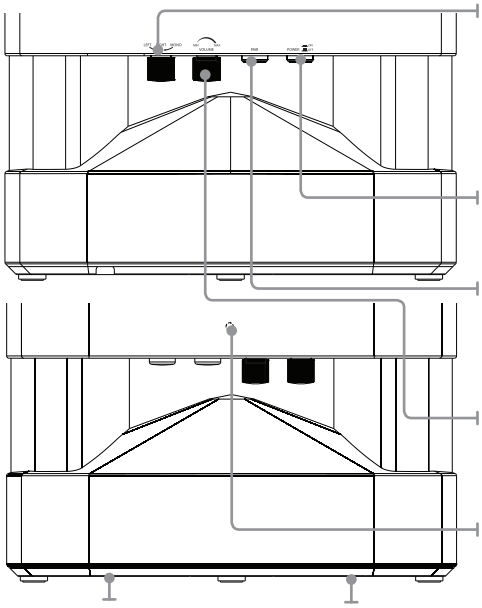

LEFT/RIGHT/MONO
Adjust to switch between Left, Right, and Mono speaker modes.

POWER
Press to turn the speaker off and on

PAIR
Press and hold to pair the speaker with nearby base stations.

SPEAKER VOLUME
Turn to adjust the volume of the wireless speaker.

LINK INDICATOR
Indicates the current status of the wireless speaker's link with the base station.

BATTERY COMPARTMENT
Requires 6 D batteries, not included.

AC POWER CORD
Use to connect the wireless speaker to a standard AC outlet.

PAIR
Press to pair the base station with the wireless speakers.

POWER
Adjust to turn the power on and off.

LINK INDICATOR
Blinks when pairing with a wireless speaker.
Lights when paired with a wireless speaker.

DC POWER INPUT

3.5MM AUDIO INPUT

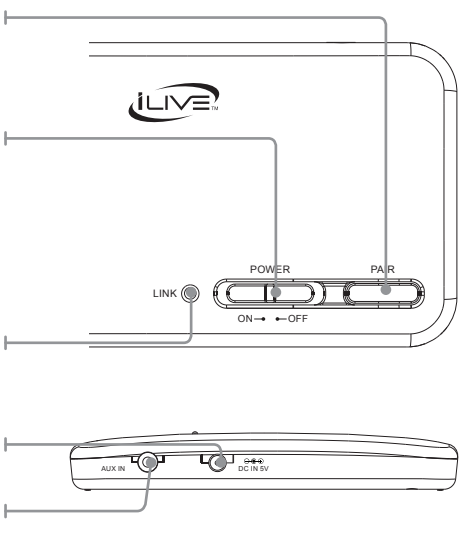

Copyright © 2012 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Pairing the Wireless Speaker with the Base Station

Link Indicators

Off
Powered off.

Slow Flashes
Standby mode.

Quick Flashes
Attempting to pair.

Solid Light
Paired and playing.

If the base station is not playing audio, then both the base station and wireless speakers will go into Standby mode. Once you begin playing audio from the base station, both the base station and wireless speaker will come out of Standby mode.

Transmission Range

Once the base station is paired with a wireless speaker, the wireless speaker can be moved approximately 200ft (line-of-sight) or approximately 90ft (indoors) and still receive audio from the base station.

Results will vary depending on the number and size of obstructions between the base station and the wireless speaker.

Before Pairing

The two wireless speakers included in the same box as the base station are pre-paired with that base station. Any additional speakers will need to be paired by following the directions below.
When pairing the base station with a wireless speaker you will need to press the Pair button on the base station and wireless speaker simultaneously. Because of this, you will need to have both the base station and wireless speaker within reach when you pair them.

What does it mean to Pair?

Pairing the base station with a wireless speaker allows the base station to recognize that wireless speaker. Once paired, the base station will remember that wireless speaker and transmit audio through it.

Pairing

1. Plug the base station into a power source, and press the **POWER** button to power the base station on.
2. The base station **LINK INDICATOR** will flash when the base station is powered on.
3. Plug the wireless speaker into a power source or insert 6 D batteries, not included, and press the **POWER** button to power the wireless speaker on.
4. The wireless speaker **LINK INDICATOR** will flash when the wireless speaker is powered on.
5. Adjust the **VOLUME** on the wireless speaker to approximately the half-way point between min. and max volume.
6. Press & Hold the **PAIR** button on the base station until the **LINK INDICATOR** flashes quickly, then press & hold the **PAIR** button on the wireless speaker.
7. The wireless speaker will emit a long beep when it is paired with the base station.

   If the wireless speaker emits short repeating beeps, it was not able to pair with the base station. Repeat steps 1-4 until you hear the long beep.

   After pairing, the wireless speaker may take up to 30 seconds to begin playing audio from the paired base station.

   Repeat steps 1-4 for each additional wireless speaker you want to pair with the base station.

3.5mm Audio Input

Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (included)

Also included is a 3.5mm to stereo RCA adapter.

1. Connect a 3.5mm audio cable to the **3.5MM AUDIO INPUT** on the side of the base station and the audio source.
2. Use the connected audio source's native controls to play and control music played through the connected base station and linked wireless speakers.

MADE GREEN
protect for today • sustain for tomorrow

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: **www.iLiveElectronics.com**

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en **www.iLiveElectronics.com**

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur **www.iLiveElectronics.com**

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215**
Email Support: **prodinfo@dpiinc.com,** Email Parts: **partsinfo@dpiinc.com**
Copyright © 2012 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.